



UHF Professional Wireless Voice Amplifier

USER Manual

Item: **PA VOCE W/WL Pro**
Wired and Wireless Voice Amplifier

Dear Customer,



thank you for choosing a voice amplifier from the Audiodesign range.
Before using it, read the manual carefully because correct use allows you to obtain the best performance.

The **PA VOCE W-WL Pro** model is a multifunctional amplifier with **wired microphone, Wireless microphone, USB / TF player, Bluetooth connection, FM radio and AUX input**. The choice of offering both the wired and wireless microphone in the same model is an exclusive Audiodesign and offers maximum flexibility and safety of use. It is also equipped with an **Echo effect** and a **remote control**.


It includes a long-lasting lithium battery and has a clear and powerful sound to ensure use even from a distance; it is suitable for **teaching, tour guides, promotional activities or even simply for personal entertainment**.

The product can be placed on a flat surface but also has a reliable belt hook or alternatively it can be worn, with the supplied shoulder strap.

Standard packaging

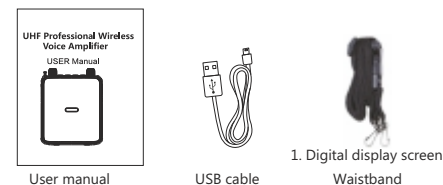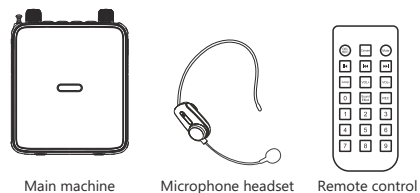


Operation Manual

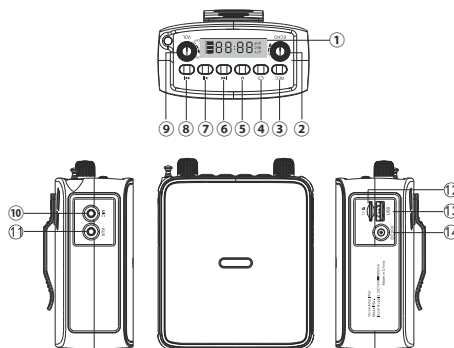

- 2. Echo adjustment
- 3. Recording
- 4. Loop & turn on / off alerts
- 5. Mode
- 6. Previous
- 7. Play / Pause
- 8. Next
- 9. Power ON & OFF / Volume adjustment
- 10. Mic
- 11. AUX port
- 12. TF card slot
- 13. USB port
- 14. DV 10V charger

Power ON/OFF

1. Power on: Rotate the knob with clockwise to Power On to enter into speaker mode, and put on the microphone headset with a suitable angle.

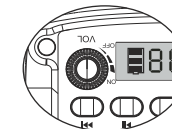

(Please keep the distance 1-2 cm from the microphone to your mouth.)

2. Rotate the knob with counter clockwise to Power Off and adjust the volume.

Play Music

TF card / U disk mode

Insert TF card or USB flash drive, automatically enter into MP3 mode, and automatically play TF card or U disk audio file.


This machine has a power-off memory function, which will remember to play the track at the time of power off.

TF card or U disk maximum support capacity: 32GB

Music format: support MP3

Note:

Loop button: When in playing music mode, short press for switching to single loop / loop all; long press for tuning on / off the alerts.

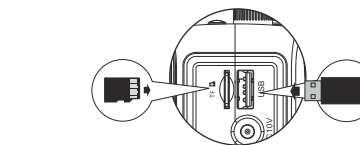

Bluetooth Mode

1. Turn on the voice amplifier; enter Bluetooth mode with the "M" button and you will hear the message "Bluetooth is ready to pair".

2. On your Bluetooth device, select the "PA VOCE", corresponding to the voice amplifier model you purchased, to connect. After BT connection, the amplifier will start playing the music sent from your Bluetooth device.

N.B.: Once the amplifier has successfully connected to the Bluetooth device, the connection will be made automatically next time.

FM Radio Mode

Automatic search: Press the "Mode" button to enter the FM mode. When the user enters the FM mode for the first time,

Press and hold the "Play/Pause" button for 2 seconds to perform automatic search. After the search is completed, the station will be automatically saved. Short press "The previous song or the next is switched.

Amplifying Mode


Turn on the wireless microphone, the machine automatically goes to the Amplifying Mode.

Note: The machine and microphone has been paired successfully before leaving the factory, and will be automatically connected every time they are turned on. If you cannot connect back, please follow the steps below to reconnect:

Turn on the power on the microphone, press and hold the pairing keys on the microphone for about 3 seconds, the status indicator of the microphone flashes. At this time, turn on the power of the machine. After about 3 seconds, press the pair button on the transmitter.

If there is interference at the frequency point you are using, press the "Pair" button on the transmitter for "frequency hopping".

- 1. Power ON/OFF
- 2. The pairing keys
- 3. Indicator light

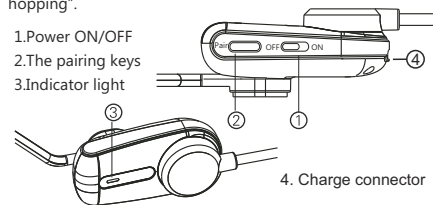

4. Charge connector

Voice Amplifier (Wired)

Insert the wired microphone to the MIC interface of the main machine, and put on the microphone headset with a suitable angle. (Please keep the distance 1-2 cm from the microphone to your mouth.)

 
TWS Connection

Turn on the device X9, after well connected bluetooth with mobile phone, turn on another device X9, press "play / pause" twice, then you will hear the voice of "TWS is turning on", after 3 seconds, TWS will be connected successfully when you will hear the voice of "connected". Two devices will play the music at the same time.

Recording Mode

1 Start recording: Turn on the wireless microphone, press the "Record" button to switch to the recording mode (as shown on the right); short press the "Record" button to stop recording;

2 Delete the recording: While playing the recording, press and hold the "Mode" button to delete the recording.



Note: Before recording, please make sure the TF card or USB flash drive are inserted in device.

AUX Mode

In the power-on state, plug one end of the audio cable into the "AUX Input" port, and connect the other end of the audio cable to an audio source such as a mobile phone or a computer for external audio source amplification.

Note: Press the "Mode" button to switch to other modes.

into the main machine, the other end is plugged into the charger or computer USB port, when the battery is charged full, the red light is always on.

2. When the machine is plugged into TF card or USB disk, use the standard accessory USB cable, one end is connected with the machine, the other end is connected with computer, it enters into Card Reader mode, it can copy or delete the music file of TF card or USB disk.

Common Faults and Treatment Methods

Cannot play when turn on the machine	Check whether the battery have the power or not
	Check whether the music files of TF card or USB disk are MP3 format or not
No music sound when playing	Check whether the volume is adjusted or not
No sound when amplifying	Check whether the plays are in pause mode or not
	Check whether the wired microphone is plugged into MIC slot correctly or not
Can't search for FM radio channel / search for less FM radio channel / with much noise	Check whether the wireless microphone have pairing the device correctly or not
	Check if the surrounding environment is too tight or remote
	Confirm whether the environment is covered by FM signal
If the faults are still unsolved, please contact the local dealer in time	

Warranty:

The product is covered by a guarantee against manufacturing defects. To use it at its best, read the user manual carefully.

The product contains a lithium battery which, like all lithium batteries, has specific maintenance procedures, under penalty of forfeiture of the warranty.

If you do not use the product for a long time, remember to recharge the battery at least every 6 months. For recharging, use ONLY chargers with the correct voltage (5V dc) and amperage (500 mA). The use of fast charge systems, is prohibited because it can permanently damage the battery.

Refer to the store where the product was purchased to access the support service.

The following conditions are not covered by the warranty,

- Exceeding the warranty period.
- Product damage caused by unexpected factors or human behavior.
- Product failure or damage caused by force majeure factors such as earthquakes, fires, floods, lightning strikes, etc.
- Unauthorized disassembly, repair or modification without the permission of the company.

Specifications	
Product	PA VOCE W/WL Pro
Max output power	40 W
Output impedance	4 Ohm
Frequency Response	120 - 18000 Hz
Charging Voltage	10 V DC
Battery	Litio 7,4 V - 2000 mA
Working Temperature	-10° / +45°
Working Time	Min 7 H
Size	100x115x52 mm
Weight	445 gr



Audiodesign Srl
Via dell'industria, 28
42025 CAVRIAGO (RE)
+39 0522 941444
www.audiodesign.it
info@audiodesign.it

